Mamiya Universal BLACK



INSTRUCTIONS

Contents

Special Pointers for Using Mamiya Universal	
Main Features	;
Specifications	4
Description of Parts	
Assembling	7
Attaching the Lens	7
Pulling Out the Lens from its Retracted Position	7
Attaching the Hand Grip	8
G Adapter1	(
Polaroid Land Camera Back 1	C
Selecting Brilliant Frame in the Viewfinder1	1
Focusing with Coupled Rangefinder 1	1.1
Areas of Viewfinder Field to be Composed1	2
When Using Roll Film Holder1	2
Distance Range Composed by Brilliant Frame1	2
When Using Polaroid Land Pack Film Holder1	3
Depth of Field Scale and Infrared Photography1	5
Depth of Field Scale1	5
Intrared Photography1	5
Press Focus Operation1	6
CCESSORIES1	8
acceptable Photosensitive Material and Actual Picture Size	9
foil Film Holder (6 × 9, 6 × 7)	0
Description of Parts	0
Prior to Loading Holl Film2	1
	Special Pointers for Using Mamiya Universal Main Features Specifications Description of Parts Assembling Attaching the Lens Pulling Out the Lens from its Retracted Position Attaching the Hand Grip Stabilizing Plate Attaching the Back M Adapter G Adapter Polaroid Land Camera Back Derating the Viewfinder Selecting Brilliant Frame in the Viewfinder Focusing with Coupled Rangefinder Areas of Viewfinder Field to be Composed When Using Roll Film Holder Distance Range Composed by Brilliant Frame When Using Polaroid Land Pack Film Holder Depth of Field Scale and Infrared Photography Depth of Field Scale Infrared Photography Shutter Operation Press Focus Operation 1 Sing Flash CCCESSORIES CCCESSORIES CCCESSORIES CCCESSORIES CCCESCORIES CCCESCIPTION Description of Parts Prior to Loading Roll Film 2

Loading Roll Film	21
Photographing	
Roll Film Holder Model K	23
Prior to Loading Roll Film Holder	23
Loading Roll Film	
Focusing Hood	24
Polaroid Land Pack Film Holder	25
Short Course on Photography	25
Accessories for Polaroid Land Pack Film Holder	26
Focusing Hood Model P	26
Optical Viewfinder Model P	26
Format Gauge	
Focusing Screen Holder	27
Right-angle and Magnifying Focusing Backs	28
Composing the Picture by Ground Glass Focusing Screen for	
Cut Film	29
Cut Film/Plate Holder Type J	30
Cut Film/Plate Holder Type A	31
Extension Rings	
Spacer Set	33
Life-size Photocopying Set	
Tetraphoto Adapter	
Accessories for the Viewfinder	38
Grip and Tripod Adapter	39
Cases	
LENSES	
Angle of View Changes by Interchanging Lenses	43
Lens Comparison Chart	45
Shutter Operation	47
Depth of Field Table	
System Chart for Mamiya Universal	53
•	

Special Pointers for Using Mamiya Universal

Refer to the following pages for further details.

The 100 mm f/3.5 lens is a retracting type. When the lens has been retracted, focusing cannot be effected although the two images on the rangefinder coincide.

Page 7

4.

When taking photographs with the vertical format camera position, on a tripod, use a tripod adapter on the hand grip socket for vertical format photography.

Page 40

Be sure to cock the shutter before keeping the shutter open with the press focus lever. Disengage the lever lock button and turn the lever in the same direction as the shutter cock; then the shutter will remain open.

By pushing the lever back to its original position, the shutter

will close.

Page 16

5.

When using the roll film holder for Mamiya RB or the various film holders and adapters for the $2~\% \times 3~\%$ Graflok $^{\circledR}$ back, made by GRAFLEX $^{\circledR}$, Inc., use the G adapter instead of the M adapter.

Page 10

When framing a 6×9 or 6×7 composition with the finder's brilliant frame, compose it within the inner edges of the frame width for short distances; use the outer edges as a guide for long distances:

Page 12

Main Features



The Mamiya Universal, the same unique breed as the Mamiya Press used by professional photographers both at home and abroad, is a large 6×9 film format camera with the functional features listed below. It offers the distinct advantage of its large film size not only for general photography, but also for news photography, commercial work, and scientific application.

- * Large film size presents sharp, fine rendition of every detail.
- * Variety of interchangeable lenses ranging from 50 mm wide angle to 250 mm telephoto.
- * Quick interchangeability of lenses with bayonet ring mounting.
- * Accurate focusing through coupled rangefinder.
- * Finder with bright, easy-to-see brilliant frame, featuring automatic parallax compensation.
- * Further accurate focusing through ground glass focusing screen possible.
- * Quick photography with roll film holder (lever winding system). Available in 6×9 and 6×7 format for both 120 and 220 films.
- * Roll film holder K enables photography in 6×9 , 6×6 , or 6×4.5 format.
- * Also accepts dry plates and cut films, providing for single shots with these films.
- * Extreme close-up photography through using spacer set and/or extension rings.
- * Use of Polaroid Land pack film holder offers instant photographic prints in 3 ¼ × 4¼ inch format.
- * The G adapter enables using the roll film holder and various film holders for Mamiya RB, in addition to the film holders of 2 ½ × 3 ½ Graflok back made by Graflex, Inc.
- * Easy-to-grasp hand grip with cable release for added versatility.
- * Many other accessories available for any type of photography.

Specifications

and 127 mm lenses.


Type : Interchangeable lens type 6×9 format camera Back mount : Interchangeable back, three types (M adapter. Picture size : Photography with 6×9 , 6×7 , and 6×4.5 G adapter, and Polaroid Land camera back) formats by using various holders. When using can be attached. the POLAROID LAND pack film holder, actual Grip : Removable hand grip with cable release. picture size is 73 × 95 mm. Others : Flashgun mounting socket, accessory shoe, Lens mount : Breech lock bayonet mount type. camera body stabilizing plate, and tripod Shutter : SEIKO #0 shutter socket are provided. Shutter speed B, 1-1/500 second Physical dimensions : (Camera body, with 100 mm f/3.5 lens) Flash synchronization, M and X selecting type. Height: 6 19/32 in. (167 mm) With press focus device (shutter blade arrest-Width: 4 25/32 in. (121 mm) without hand grip ing) Standard lens : 100 mm f/3.5 retracting type, minimum aper-Depth: 4 1/2 in. (114 mm) ture f/32, with lens hood. lens in retracted position, distance 127 mm f/4.7, minimum aperture f/64, with lens scale at infinity hood. (Camera body with 127mm f/4.7 lens) Rangefinder : Reversed Galileian telescope, couples double-Height: 6 19/32 in. (167 mm) image coincidence type, instant coupling to Width: 4 25/32 in. (121 mm) selected lens. without hand grip Viewfinder : Adjustable brilliant frame fields for 100 mm, 6 in. (152 mm) Depth: 150 mm, and 250 mm lenses; 6×9 and 6×7 Weight: Camera body: 2 lbs. 11/2oz. (950 gr.) formats: Automatic parallax compensation. 100 mm f/3.5 lens: 1 lb. 1 oz. (480 gr.) Use exclusive optical viewfinders for 50 mm 127 mm f/4.7 lens: 1 lb. 9/16 oz. (470 gr.) and 75 mm lenses. When photographing Hand grip: 10 9/16 oz. (300 gr.) through the Polaroid Land film pack size, use the optical viewfinder model P for 75, 100,


Description of Parts

- 1. Accessory shoe
- 2. Strap eyelet
- 3. Flashgun mount
- 4. Flashgun mounting socket
- 5. Back locking slide
- 5' Lock button
- 6. Bayonet ring
- 7. Stabilizing plate
- 8. Hand grip socket
- 9. Rangefinder coupling pin
- 10. Lens coupling mark
- 11. Cable release holder
- 12. Hand grip lock ring
- 13. Shutter release trigger
- 14. Hand grip
- 15. Cable release
- 16. Depth of field scale
- 17. Distance scale
- 18. Focusing ring
- 19. Shutter cocking lever



- 20. M-X selector
- 21. Shutter speed dial
- 22. Synchroflash terminal
- 23. Shutter release lever
- 24. Aperture control lever
- 25. Cable release socket
- 26. Press focus lever
- 26'. Press focus lever lock button
- 27. Indicator window for viewfinder field frame
- 28. Slide button for viewfinder field frame selection
- 29. Eyecup
- 30. Eyepiece
- 31. Tripod socket
- 32. M adapter
- 33. Locking knob
- 34. G adapter
- 35. Locking slide

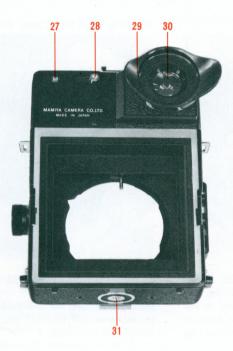

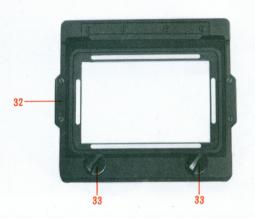



Assembling

Attaching the Lens



By rotating the bayonet ring counter clockwise until it stops, the red dot of the lens coupling mark on the bayonet ring comes to the top, and the dust cap on the front of the camera body can be removed. At this position of the bayonet ring, insert the lens, matching the red mark on the lens to the red mark on the bayonet ring. Then turn the bayonet ring clockwise, locking the lens in place.

Detaching the lens is done in a reverse order to that described above.

PRECAUTION!

Do not touch the pin (9) on the camera body used to couple the lens to the rangefinder.

If the lens is changed while a loaded film holder is attached to the camera, be sure to insert a dark slide into the holder.

Pulling Out the Lens from its Retracted Position



When using the 100mm f/3.5 standard lens, the lens-shutter assembly must be pulled out from its retracted position before taking general photographs. Grip the lens-shutter assembly firmly, turn it slightly counterclockwise, and pull it out; then, turn it clockwise(in the arrow direction) and secure it in place.

If the lens-shutter assembly is left in its retracted position, the coupled rangefinder will not function even when the two images coincide and form a single image.

Although the lens is not used for normal photography with the lens-shutter assembly in its retracted position, the lens is designed to allow its lens-shutter assembly to remain retracted so that it can be used even when extension rings are used.

Also lens retraction is necessary, when using this lens with another camera whose back mount can be extended, when taking a picture with the back mount tilted.

Attaching the Hand Grip




To attach the hand grip, insert the hand grip into the grip socket (8) of the camera body, and firmly turn the hand grip lock ring (12).

Screw the end of the cable release (15) extending from the hand grip into the release socket (25) of the lens-shutter assembly.

While dismounting a lens, hang the cable release on the cable release holder (11).


Stabilizing Plate

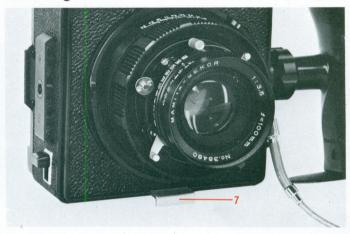

Pull out the stabilizing plate (7) on the bottom of the camera body when resting the camera on a desk, table, or other surface.

Assembling

Attaching to Back

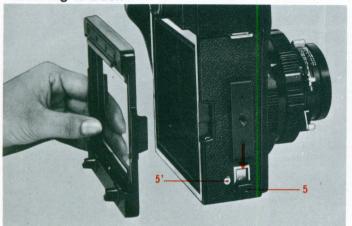

Before attaching the back, confirm that both side locking slides (5) are kept at their lowest position. If not, push down the locking slide while pushing in the lock button (5').

Align the red point on the M adapter, G adapter, or Polaroid Land camera back (Polaroid Land pack film holder and focusing hood model P) with the red point on the camera body, inserting both sides of the protruded portions to the indented portions on the camera body.

Securely push up the locking slide on both sides. While pushing up the slide, the lock button will spring out automatically. The lock button functions to prevent the back from being detached unexpectedly from the camera body.

Secure both sides of the back by using the locking slides (5). Do not raise the camera by holding the back in a condition that only one side is secured.

To remove the back, depress both side locking slides (5) while the lock buttons (5') are pushed in.

M Adapter



When installing the M adapter on the camera back, the roll film holder for Mamiya Press, focusing screen holder, and so on can be used.

To attach the above-mentioned accessories to the adapter, keep the flattened edges of the two locking knobs of the M adapter parallel with the bottom line of the picture format, insert the top of the holder in the upper groove, and push in the bottom; then rotate the two knobs 90 degrees either to the right or left.

G Adapter



When the G adapter is attached instead of the M adapter, the roll film holder for Mamiya RB can be used. Furthermore, the roll film holder and the focusing panel made by GRAFLEX, Inc., and accessories for the GRAFLOK back can be employed.

Polaroid [®] Land Camera Back



Remove the camera back adapter and attach the Polaroid Land camera back directly to the camera body. The Polaroid Land pack film holder and the focusing hood model P are available.

With the Polaroid Land pack film holder, use a Polaroid 8-exposure, $3 \frac{1}{4} \times 4 \frac{1}{4}$ inch Land film pack. For color photography, use Polaroid Polacolor® film type 108 or 668; for black-and-white photography, use Polaroid Land film type 107, 665 or 667.

By attaching the focusing hood model P, direct focusing through the ground glass focusing screen of $3 \% \times 4 \%$ inch format (ef-


fective picture size of $2\% \times 3\%$ inch, 73mm \times 95mm) becomes possible. On the ground glass focusing screen are 6×9 and 6×7 format indicating lines.

NOTE:

The back attaching system used on this camera is exclusive with Mamiya; thus, do not attempt to use other Polaroid Land camera backs.

Operating the Viewfinder

Selecting Brilliant Frame in the Viewfinder

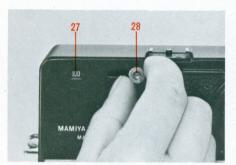

The viewfinder field frame, indicating the field for 6×9 and 6×7 formats, is adjustable for 100mm, 150mm and 250mm focal length lenses. By sliding over the slide button (28), adjust the number in the indicator window (27) to match the focal length of the using lens.

When using the 50 mm or 75 mm lens, attach the exclusive optical viewfinder of each lens to the accessory shoe on the camera body.

Focusing with Coupled Rangefinder





Within the small circle in the center of the viewfinder field two images of the subject are visible. Turn the focusing ring so that these two images coincide.

When focusing, coincide the double images at the center of the circle. Looking through the center of the eyepiece is also a key point in accurate focusing. When turning the focusing ring of the lens barrel, be careful not to turn the bayonet ring of the camera body.

When the lens-shutter assembly is in a retracted position, or when extension rings are used, the rangefinder will not function even though the double images coincide.

Parallax

Brilliant frames in the viewfinder for 100 mm, 150mm and 250mm lenses are coupled with the rangefinder to automatically correct parallax.

Areas of Viewfinder Field to be Composed

When using Roll Film Holder

When composing the 6×9 or 6×7 format with the viewfinder frame, employ inside edges of the frame for subjects at close distance; use the outer edges of the frame for subjects further away.

Distance Range Composed by Brilliant Frame

Focal length of lens	For close ranges, use inside edges of frame	For distances further away, use outside edges of frame
100mm f/2.8 f/3.5	3.5ft to approx.6ft (1m) (2m)	approx. 6ft. to infinity (2m)
150mm f/5.6	6ft. to approx.9ft. (2m) (3m)	approx. 9ft. to infinity (3m)
250mm f/5		approx.12ft.to infinity (4m)

The 250mm f/5 lens interlocks with the range-finder from distances of 20 ft (7m) to ∞ (infinity).

When photographing with the 6×6 format or 6×4.5 format by employing the roll film holder model K, use the attached finder mask. See page 24 for details.



For close range



For close range



 6×7

For distances further away



For distances further away




Areas of Viewfinder Field to be Composed (cont.)



50mm Lens


Attach the optical viewfinder for 50mm lens on the accessory shoe. To correct parallax, turn the knob at the back of the viewfinder and select the same distance scale shown on the dial as the focused distance to subject.

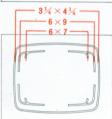

75mm Lens

Attach the optical viewfinder for 75mm lens to the accessory shoe. To correct parallax, turn the knob at the back of the viewfinder and select the same distance scale shown on the dial as the focused distance to subject. (The brilliant frame of 3 $\%\times4$ % inch format indicates the field of view when photographing with the Polaroid Land pack film holder).

127mm Lens

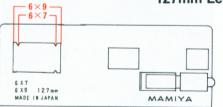


Attach a finder mask to the viewfinder window of the camera body. For correcting parallax, select the brilliant frame of the viewfinder for 250mm lens, moving your eye about until the brilliant frame is centered in the viewfinder field.

When Using Polaroid® Land Pack Deciding the Field Composition

Since the Polaroid film pack photographs a wider area than does the viewfinder field frame of the 6×9 cm format, compensate the field composition in the following manner, depending on the focal length of the lens to be used. For accurate field composition, use the focusing hood model P. Also, the optical viewfinder model P for 75mm, 100mm, and 127mm lenses is available to ensure accurate field of view.


The 75mm and 127mm focal length lenses are designed to cover the entire picture area of the Polaroid film pack (3 $\% \times 4 \%$ inch format). However, since other ordinary Mamiya Press lenses are designed for the 6 \times 9 cm format, if these lenses are used with the Polaroid film pack, the four corners of the format may be slightly darkened.

Film Holder

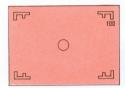


With the 100 mm lens:

Use the viewfinder entire area. In this case, the actual picture area covers a slightly wider field.

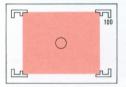


With the 127mm lens:

By observing the camera viewfinder, determine the field of view by using the 6×7 format brilliant frame for 100 mm lens as a guide.

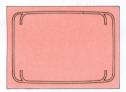


With the 50mm lens:

Attach the optical viewfinder for 50 mm lens on the accessory shoe and observe the view-finder entire area.

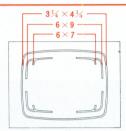


With the 75 mm lens;

Use the brilliant frame for $3\,\%\times4\,\%$ format in the optical viewfinder for $75\,\text{mm}$ lens.

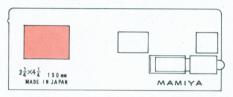

With the 150mm lens:


Determine the field of view by covering the viewfinder mask for $3 \% \times 4 \%$ format on the camera finder window.

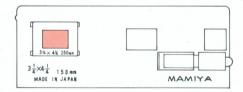

With the 250mm lens:

Determine the field of view by inserting the mask for 250 mm lens in the finder mask for 150 mm lens.

Depth of Field Scale and Infrared Photography

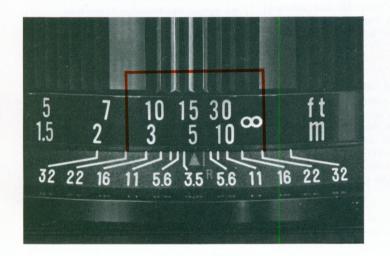

Depth of Field Scale

Standard f-stop marks, indicating the depth of field for the aperture used, are located on both sides of the triangle mark (🛦) on the depth of field ring. This indicates that subjects within a definite area will be in sharp focus on the photograph. For example, when focusing on a subject 15 feet (5 meters) away with a 100 mm standard lens at f/22, everything between 8 feet (2.5 meters) and infinity is in focus.

Infrared Photography

When photographing with infrared film, the distance scale obtained by focusing with the rangefinder must be shifted by rotating the focusing ring slightly until the focused point on the distance scale is changed to align with the small red "R" on the depth of field ring.

Use a red filter when photographing with infrared film.

Shutter Operation



Cock the shutter by, moving the shutter cocking lever (19).

Screw the end of the cable release which extends from the hand grip into the cable release socket (25).

To release the shutter, press the shutter release trigger of the hand grip with the left forefinger. Also, the shutter can be released by tripping the shutter release lever (23).

Press Focus Operation



When focusing through the ground glass, keep the shutter open by the following method.

 Cock the shutter, regardless of the shutter speed setting.

Disengage the lock button by thoroughly pushing it to the camera body side and turn the press focus lever in the shutter cock direction; then the shutter will remain open.



By pushing the press focus lever back to its original position, the shutter will close. There is no need to reset the shutter.

PRECAUTION:

Be sure to operate the press focus lever AFTER cocking the shutter. While the shutter is kept opened, the shutter cannot be released with the shutter release button.

Applying an excessive force to the release button may cause shutter damage.

When the press focus lever is not used, be sure to engage the lock button to prevent inadvertently moving the lever.

Using Flash

Shaded area of the above table indicates the synchronizing shutter speed.

Move the MX-selector lever to obtain the right terminal.

When the MX-selector is set to M, M-class bulbs synchronize to all shutter speeds.

When the MX-selector is set to X, electronic flash synchronizes to all shutter speeds.

Flash Synchronizing Table

		Flash bulb	Shutter speed									
	Terminal		1	1/2	1/4	1/8	1/5 .	1/30	1/60	1/125	1/250	1∕500
Ī	М	M-class										
ľ		Electronic flash										
	X	F-class										
1		M-class										



Accessories



Acceptable Photosensitive Material and Actual Picture Size

		Photosensitive ma	terial		
Type of holder	Туре	Nominal size	Actual picture size	Number of exposures	
6 × 9 cm roll film holder	Roll film	120	$2{}^{13}\!$	8	
0 × 9 cm 10H Him noider	Roll IIIm	220	n-	16	
6 × 7 cm roll film holder	Roll film	120	$2\frac{13}{4}\times2\frac{4}{4}$ in. 56×68 mm	10	
0 × 7 cm 1011 Hilli Holder	ROII IIIM	220	11	20	
	Roll film		$2\frac{1}{4} \times 2\frac{4}{4} \text{in.} 56 \times 84 \text{mm}$	8	
Roll film holder model K		120	$2\frac{1}{4} \times 2\frac{1}{4}$ in. 56×56 mm	12	
$(6 \times 9, 6 \times 6, 6 \times 4.5 \text{cm})$			1 4/4× 2 1/3/4 in. 41.5×56 mm	16	
	Plate	2 ½ × 3 ½ in.6.5 × 9 cm	2 ½×3 ½in.57×84mm		
Cut film/plate holder (type J)	Cut film	2 ½ × 3 ½ in. 6.5× 9 cm	11		
	Cut film	$4 \frac{34}{4} \times 6 \frac{12}{2}$ in. size divided into 4 equal parts	2 1/4 × 3 1/32 in. 57 × 77 mm	1	
Cut film/plate holder (tune A)	Plate	2 ½ × 3 ½ in. 6.5× 9 cm	$2\frac{1}{4} \times 3\frac{5}{6}$ in. 57×84 mm		
Cut film/plate holder (type A)	Cut film	2 1/4 × 3 1/4 in.	2 ¾4× 3 ¼in. 52×79mm		
Polaroid Land pack film holder	Polaroid film pack series 100 or 660	3 ½ × 4 ½ in. (8.3×10.8cm)	2 ½× 3 ¾ in. 73×95mm	8	

Roll Film Holder $(6 \times 9, 6 \times 7)$



There are two types of roll film holders—one for $6\times 9\,\text{cm}$ and the other for $6\times 7\,\text{cm}$ formats. Both types accept 120 and 220 roll films.

Holder Type	Films	Number of exposure
00	120	8
6 × 9	220	16
07	120	10
6 × 7	220	20


Description of Parts

- R-1 Film Advance Lever
- R-2 Film Counter Window
- R-3 Film Sensitivity Reminder Dial
- R-4 Counter Change-over Knob
- R 5 Film indicator Window
- R-6 Dark Slide
- R-7 Film Wind-stop Release Lever
- R-8 Film Chamber
- R-9 Back Cover Latch
- R-10 Spool Change Knob
- R-11 Start Mark
- R-12 Take-up Spool Chamber
- R-13 Plate Catch (Left)
- R-14 Pressure Plate
- R-15 Plate Catch (Right)







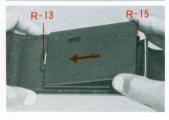

Prior to Loading Roll Film

Set the automatic film wind stop device for the film to be used (120 or 220).

Turn the counter change-over knob (R-4) either to the right or left until the figure appearing in the film indicator window (R-5) corresponds to that of the film to be used (120 or 220).

Open the back cover

By pulling out the back cover latch while pressing the back cover to the holder, the back cover can be opened.

Make sure that the correct side of the pressure plate corresponds to the film used.

One side of the pressure plate (R-14) is for No. 120 roll film, and the other side is for No. 220. The figure "120" or "220" is indicated on the window of the pressure plate.

Reverse the pressure plate if it does not match the film Removing the Pressure Plate:

Remove the plate by pushing its right side to the left, pulling it out from the plate catch (R-15).

Reattaching the plate:

While aligning the upper and lower edges of the plate with the flange, insert the groove into the plate catch (R-13) on the left, then hook the plate catch (R-15) on the right while pushing it slightly to the left. Always ascertain that the correct side of the pressure plate corresponds to the film used.

Use the convenient film sensitivity reminder dial (R-3) as a memo of film speed in the holder, turning the dial corresponding to the loaded film speed to the red mark.

Loading Roll Film




Avoid direct sunlight while loading or unloading film. Do it in the shade.

Pull out the spool change knob (R-10) and place an empty spool into the spool chamber (R-12).

Pull out the other spool change knob (R-10) and place a roll film into the film chamber (R-8).

By turning the spool change knob either to the right or left after pulling it out, the knob will remain projected. By turning back the knob, the knob will snap back to its original retracted position.

The memo clip at the holder back cover can accommodate a film box lid or a blank paper pad for memorandum.

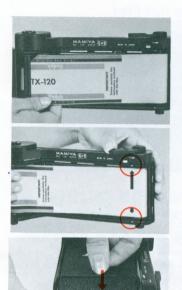

Draw out the end of the leader paper of the film, inserting the tip into the slit of the take-up spool.

If the spool is not in the proper position or the leader paper of the film is not correctly inserted into the take-up spool slit, film winding cannot be operated properly or smoothly.

Wind the film advance lever (R-1) gradually until the start mark on the leader paper aligns with the start marks (R-11) on the holder.

Close the back cover and push in the back cover latch, keeping the back cover pressed to the holder.

When the back cover is closed, the start marks will be slightly separated; however, this implies no bad effect whatsoever.


As the film advance lever is carefully wound, figure "1" appears in the film counter window and the lever stops winding. Even before figure "1" appears in the film counter window, a heavy drag may be felt; however, continue winding until the lever actually stops. Now the first film frame is ready to be exposed.

Photographing



Attach the loaded roll film holder to the camera body.

Pull out the dark slide (R-6); now, start taking photographs.

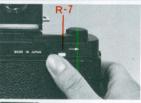

After each exposure, by moving the film wind-stop release lever (R-7) in the direction of the arrow, the film can be advanced by turning the film advance lever



Since the film will not advance far enough with only one stroke of the film advance lever, turn the lever until it stops at the second stroke. Winding may be accomplished by moving the lever with several short, definite strokes until the lever stops, although never wind the lever too rapidly.

After all frames have been exposed, move the wind-stop release lever (R-7) once, then continue turning the film advance lever until you feel tension on the advance lever lessen as the leader end of the film slips off the spool, finally turning it freely in the take-up chamber. Now open the back cover and remove the film.

Fully insert the dark slide when the roll film holder is to be detached or when the lens is interchanged before completing a roll of film.

Without a film loaded, turning the film advance lever will not advance the film counter which remains at the start (S) mark. When some other mark is visible in the film counter window, it is your assurance that a film is loaded

Roll Film Holder Model K



This holder is for taking 6×9 , 6×6 and 6×4.5 format pictures with a 120 roll film. The film is advanced by turning the knob. The number of exposures are read on the back of the holder.

The memo clip at the holder back cover can accommodate a film box lid or a blank paper pad for memorandum.

Prior to Loading Roll Film




Unless photographing in 6×9 format, the viewfinder field as well as the picture format of the holder must be changed.

Installing the Picture Frame

Attach the picture frame for 6×6 or 6×4.5 format into the holder while a dark slide is inserted in the holder. Insert the picture frame so that the folded portion enters the dark slide side (inner side). Insert the claws on both ends into the grooves of the picture frame of the holder while slightly bending the picture frame lengthwise (as shown in the photo).

Loading Roll Film

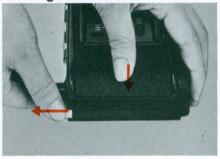

When loading or unloading a film, avoid direct sunlight. Do it in the shade.

By pulling out the back cover latch while pushing the back cover toward the holder, the back cover can be opened.

Pull out the spool change knob and place a roll film in the film chamber.

Pull out the leader paper of the film, insert the edge of the leader paper into the slit of the take-up spool and wind it around the spool once; then close the back cover. When closing the back cover, press the back cover toward the holder, pushing into the back cover latch

While observing the window for the picture format to be photographed, turn the film advance knob clockwise until figure "1" appears in the window.


Avoid direct sunlight when opening the back window.

Focusing Hood

Attach the holder to the camera body, pull out the dark slide, and start to photograph.

After each exposure, open the back window, and turn the film advance knob until the next figure appears in the window.


When removing the holder from the camera or changing the lens while the film is loaded, be sure to insert the dark slide.

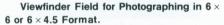


Attach a finder mask for 100 mm lens to the viewfinder window of the camera body (this mask is for 6×6 format). For photographing in 6×4.5 format, insert the mask for 6×4.5 format into the back of the 6×6 format mask.

To attach the mask to the camera body, raise the flat spring attached in front of the mask by holding it with the thumb and forefinger, and apply the mask to the top cover front frame and releasing the raised flat spring.

To correct parallax, select the brilliant frame for 250 mm lens, moving the eye around while looking into the viewfinder until the brilliant frame is centered in the entire viewfinder field.

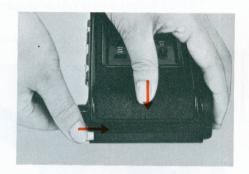



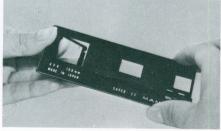



For accurate focusing or for confirming the depth of field, use the focusing hood. A Fresnel lens is used with this focusing hood to make the whole image brighter and easier to focus.

Polaroid® Land Pack Film Holder



With a Polaroid Land film pack, you can obtain a color print in 60 seconds, and a black-and-white print in 15 seconds.

For color pictures, use Polaroid Polacolor film, Type 108 or 668.

For black and white pictures, use Polaroid Land film Type 107, 665 or 667.

Both color and black-and-white films are eight-exposure film packs.


Actual picture size is 2 $\% \times 3 \%$ inches (73 \times 95mm). Install this holder directly on the camera body after removing the M adapter.

"Short Course" on photography


Install a holder containing film pack on the camera.



Pull out the white tab, then a yellow tab pops out and take a picture after pulling out the dark slide.

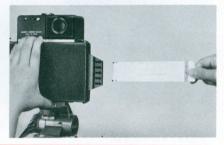

Pull the yellow tab straight out of the holder and at a constant speed. Development starts from this operation.

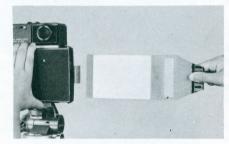

After the recommended development time, strip off the white paper (the print). The photo will be completed.



Further detailed explanation is provided with the purchased holder.

Accessories for Polaroid® Land Pack Film Holder

Focusing Hood Model P




This focusing hood has the same size format as the Polaroid Land film pack. The focusing screen has a Fresnel lens, offering a bright, sharp image on the screen. Use this focusing hood to confirm accurate focus or the actual picture format.

Since this focusing screen has indicating lines for 6×9 and 6×7 formats, it can be used as a focusing screen for composing with the roll film holder.

The hood can be separated from the focusing screen panel, by sliding the locking slides on both upper and lower edges.

Optical Viewfinder Model P

for 75mm, 100mm, and 127mm Lenses

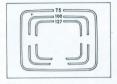




This optical viewfinder is especially designed for 75mm, 100mm, and 127mm lenses to permit observing an accurate field of view when taking pictures with the Polaroid Land film pack; series 100 or 660 $(3 \times 4 \times 4 \times inch)$.

By attaching the viewfinder to the accessory shoe, and looking through the viewfinder eyepiece, the field of view corresponding to the lens used can be determined.

To compensate for parallax, turn the knob on the back of the viewfinder, and set the focused distance to subject.

Format gauge

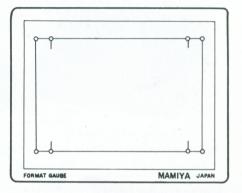

As a preparatory test when taking an important photograph, make a trial exposure with the Polaroid film pack to confirm lighting and composition of the actual object; then photograph the final picture on roll film and so on.

Employing this procedure, unexpected failures can be prevented.

In these cases, when placing this format gauge on the photographed subject, composition when photographing with a 6×9 format or 6×7 format can be ascertained in advance.

Since four corners of the outline indicat ing the respective size are perforated, the picture can be cut and checked after being marked through these holes.

Focusing Screen Holder



Immediately after focusing with the focusing screen, a cut film/plate holder can be inserted from one side of the focusing screen holder.

How to Open the Back Cover

By moving the back cover catch button at the bottom of the back cover in the direction of the arrow, the back cover will open. With the opening angle adjustment slide kept UP, the back cover will open horizontally; and with the opening angle adjustment slide kept DOWN, the cover will open upward.

Focusing



To focus with the ground glass image, keep the shutter open and the lens at its fullest aperture, focusing by rotating the focusing ring.

(When keeping the shutter open, follow the instructions on Page 16.)

Depth of field can be observed on the ground glass screen through stopping down the diaphragm by turning the aperture control lever.

Full size of the focusing ground glass is for $6\times 9\text{cm}$ format, the light vertical lines indicating the $6\times 7\text{cm}$ format.



After focusing, press the focusing screen release lever to permit the screen to retract, and insert the cut film/plate holder from one side of the focusing screen holder.

To remove the film holder, press the focusing screen release lever with your left hand, hold the film holder and draw it out by pulling it toward you.

Be sure to close the shutter before attaching the film holder. Pull out the dark slide before photographing. Insert the dark slide before removing the film holder.

Right-angle and Magnifying Focusing Backs

Right-angle focusing back



This device enables observing the image on the ground glass from the right-angle direction against the optical axis. The right-angle magnifier can be very simply turned upward or sideward, facilitating focusing from any camera angle.

Magnifying focusing back



This back is provided with an eye-level, totally enclosed box instead of the right-angle magnifier of the right-angle focusing back. Precise focusing is possible by directly observing the image on the ground glass focusing screen through the eyepiece magnifier.

Since a Fresnel lens is used on both focusing backs, the entire ground glass is very bright, and focusing can be easily accomplished because extraneous light is blocked out. The ground glass has light lines which indicate a 6×7 format.

After focusing, insert a cut film/plate holder as well as the focusing screen holder for photographing.

Attaching and Detaching the Right-angle Magnifier

The right-angle magnifier can be removed by swinging it around the bottom of the housing while depressing the button of the right-angle magnifier.

To attach the right-angle magnifier, match the projections at the bottom of the magnifier to the holes of the holder, and press in the upper part. When attaching the magnifier, the button does not need to be pressed.

The right-angle magnifier can be attached for up, down, right, and left directions. Merely attach it in the direction necessary for the camera angle employed.


When looking from above or below, the image assumes the correct right-side-up position, but the right and left will be reversed. When looking from the side, right and left are correct but the image will be upside down.

Composing the Picture by Ground Glass Focusing Screen for Cut Film


When dry plates or 2 ½ × 3 ½inch (6.5 × 9 cm) cut films are used, the actual picture format is exactly the same as seen on the focusing screen.

When "one-quarter size" cut films or $2-1/4 \times 3-1/4$ inch cut films are used, since the actual picture size of these films is a little smaller than the ground glass focusing screen, compose the picture within the frame of the broken lines as shown in the drawings.

For "one-quarter size" cut film taken from 4 $\mbox{\%}\times 6\mbox{\%}inch$ (12 \times 16.5cm) cut film;

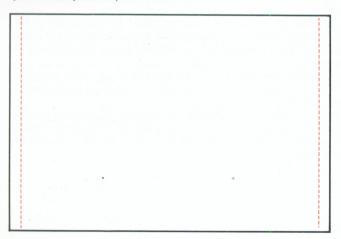

For 2 ½ × 3 ½ inch cut film;

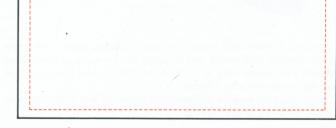


Cut Film/Plate Holder (Type J)

When Using a Dry Plate $2 \% \times 3 \%$ inch $(6.5 \times 9 \text{ cm})$:

When Using a Cut Film $2 \frac{1}{2} \times 3 \frac{1}{2}$ inch $(6.5 \times 9 \text{ cm})$:

When Using a Gut Film Taken by Cutting a $4 \% \times 6 \%$ inch Cut Film into Four One-quarter Sizes:

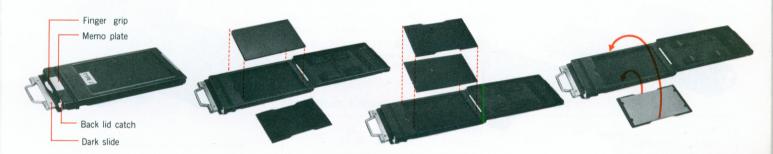

Open the Back Lid:

By pulling out the back lid catch, the back lid can be swung open by applying finger pressure to the finger grip.

Memo plate:

Use the memo plate for recording on the holder your file number, the film type, and so on.

Correct recorded letters or figures by rubbing the plate with a finger tip, soft cloth, or tissue.

Remove the film sheath from the holder, insert the dry plate with the emulsion side facing the dark slide, close the back lid, and push it back to its original position. In this case, the film sheath is not used. Remove the film sheath from the holder, place the cut film with its emulsion side facing the dark slide, then place the film sheath with the film catch side up, and close the back lid. Instead of the film sheath, a discarded dry plate may be used.

Insert the cut film in the film sheath with its emulsion side up, placing the sheath in the holder.

When a color film is cut, sometimes the film is not developed at a developing laboratory. For color photography, therefore, use factory-cut 2 $\%\times3$ % inch (6.5 \times 9 cm) color film.

Cut Film/Plate Holder (Type A)

When Using a Dry Plate 2 ½ \times 3 ½ inch (6.5 \times 9 cm):

When Using a Cut Film $2 \frac{1}{4} \times 3 \frac{1}{4}$ inch:



Remove the film sheath from the holder, insert the dry plate with the emulsion side facing the dark slide, close the back lid, and push it back to its original position. In this case, the film sheath is not used. Use the cut film/plate holder (type A). Insert a film in the film sheath, place it in the holder, and close the back lid. This film sheath is exclusive for type A; do not use it with a type J holder.

Extension Rings



Use a set of five extension rings in various combinations between the lens-shutter assembly and the camera body for close-up photography.

The values in the table represent those when the five extension rings are attached and the lens distance scale is set at the closest distance.

The lens-to-subject distance represents the distance of the subject from the front extremity of the lens barrel.

Subject coverage is the area of the subject registered on the focusing screen (2 $\%\times3$ $^{5}\%_{6}$ in. 57 \times 84mm).

- Precaution


When using many extension rings for photographing in the 6×9cm format, certain lenses may produce pictures with darker corners. By stopping down the aperture while looking into the focusing screen, how much darker the corners appear can be observed.

The 75mm f/5.6 and 250mm f/5 lenses cannot be mounted with extension rings.


Maximum Close-up Photographing Table

T	Lens-to-subject	Magnifi-	Subject	Coverage	Exposure
Lens	Distance	cation	6 × 9	6 × 7	Factor
50mm f/6.3	1 1/8" (47.9 mm)	2.04	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	9.2
100mm f/2.8	5 ½" (130mm)	1.13	$\begin{array}{ccc} 2 \ ^{\prime\prime} \times \ 2 \ ^{6} \ ^{\prime\prime} \\ 51 \times 75 \text{mm} \end{array}$	$2" \times 2^{13}/_{32}"$ $51 \times 61 \mathrm{mm}$	4.6
100mm f/3.5	6 37/4" (167 mm)	1.14	$1\frac{31}{32}$ " $\times 2\frac{7}{8}$ " $50 \times 73\mathrm{mm}$	$1\frac{31/3}{32}$ " $\times 2\frac{23/3}{64}$ " $50 \times 60 \mathrm{mm}$	4.6
127mm f/4.7	10 5/4" (256 mm)	0.90	$2~\%4'' \times 3~\%8'' \ 63 \times 92\mathrm{mm}$	$2^{31/4} \times 3^{"} \times 3^{"} \times 3 \times 76 \mathrm{mm}$	3.6
150mm f/5.6	$1' \frac{19}{32}'' (320 \text{mm})$	0.77	$2\frac{7}{8}$ " $\times 4\frac{1}{4}$ " 73×108 mm	$2\frac{7/8}{8}$ $\times 3\frac{17/8}{64}$ $73 \times 83 \mathrm{mm}$	3.1


Spacer Set

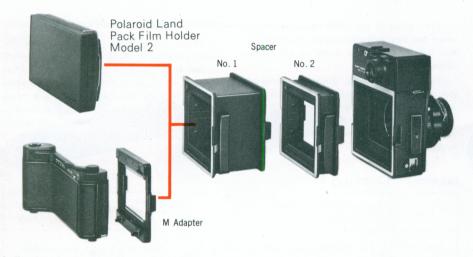

Indication sheet for subject coverage for 6×9 and 6×7 cm format

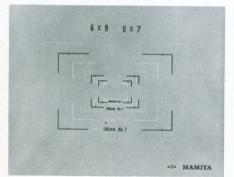

for 3 ½ × 4 ½ inch format

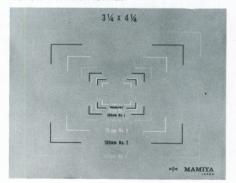

A spacer is a device for close-up photography by extending the camera back by installing a spacer between the camera back and the film holder.

Since two types (No. 1 spacer and No.2 spacer) are combined as one set, the photographing range can be varied by changing the combination or the lens to be used.

Extreme close-up photography can be achieved by combining with the extension rings.

The Polaroid Land pack film holder can be directly installed on the spacer. When using an M-adapter or G-adapter, photography through all holders installable on these adapters can be achieved.

Indication Sheet for Subject Coverage

On the vinyl sheet in the spacer set, subject coverages varying according to the combination of lenses (75mm f/5.6, 100mm f/3.5, and 127mm f/4.7) and spacers are indicated through color identification.

Close-up Photographing Table

The left-side values is each column of the close-up photography table indicate values when setting the lens distance scale to ∞ (infinity). The right-side values indicate when extending the lens to the nearest close-up distance scale.

The lens-to-subject distance indicates the distance from the front edge of the lens barrel to the subject.

Magnification indicates the ratio of image and the subject size.

Close-up Photographing Table for 75 mm f/5.6 Lens


Combination	Lens-to-subject	Magnification	Subject coverage			
	distance	Magnification	3 ½ × 4 ½	6 × 9	6 × 7	Exposure factor
No. 2	$8\frac{3}{16}$ $\sim 6\frac{31}{32}$ $208 \sim 177$ mm	0.42~0.51	$6{}^{1}\!$	$\begin{array}{c} 5\ \frac{1}{4}\text{''}\times 7\ \frac{23}{32}\text{''} \sim 4\ \frac{9}{32}\text{''}\times 6\ \frac{11}{32}\text{''}\\ (133\times 196)\sim (109\times 161)\text{mm} \end{array}$	$5\ \frac{1}{4}$ " $\times 6\ \frac{9}{8}$ " $\sim 4\ \frac{9}{32}$ " $\times 5\ \frac{1}{4}$ " $(133\times162)\sim(109\times133)\mathrm{mm}$	2.0~2.3
No. 1	$4 rac{3}{16}^{"} \sim 3 rac{15}{16}^{"} \ 106 \sim 100$ mm	1.00~1.09	$\begin{array}{c} 2~\% \% \times 3~\% \sim 2~\% \% \times 3~\% \\ (73 \times 95) \sim (67 \times 87) \mathrm{mm} \end{array}$	$2\ \frac{1}{2}$ \times 3 $\frac{1}{3}$ \times 2 \times 3 \times 1 \times 3 \times (56×83) \sim (52×76) mm	$\begin{array}{c} 2\ \%_{32}^{"}\times 2\ \%_{6}^{"} - 2\ \%_{6}^{"}\times 2\ \%_{2}^{"} \\ (56\times 68) - (52\times 63)_{mm} \end{array}$	4.0~4.4
No. 1 + No. 2	$3\frac{5}{6}$ $\sim 3\frac{3}{6}$ $84 \sim 81$ mm	1.42~1.51	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$\begin{array}{c} 1~\%_6'' \times 2~\%_2'' \sim 1~\%_2'' \times 2~\%_2'' \\ ~~ (40 \!\times\! 58) \!\sim\! (37 \!\times\! 55) \text{mm} \end{array}$	$\begin{array}{c} 1~\%_6^{"}\times 1~\%^{"} \sim 1~\%_{22}^{"}\times 1~\%_{32}^{"}\\ ~~(40\times 48){\sim}(37\!\times\!45)\mathrm{mm} \end{array}$	5.9~6.3

Close-up Photographing Table for 100 mm f/3.5 Lens (Lens is nonretracted condition)

Combination	Lens-to-subject	34	Subject coverage			
	distance	Magnification	3 ½× 4 ½	6 × 9	6 × 7	factor
No. 2	$1' \ 3\frac{1}{2}'' - 1' \ 393 - 304$ mm	0.32~0.44	$\begin{array}{c} 9\ \%_6^{''}\times 11^{1}\%_6^{''} \sim 6\ \%_{32}^{''}\times 8\ \%_{32}^{15/''} \\ (\ 230\times 300\) \sim (\ 164\times 215\)\mathrm{mm} \end{array}$	$6\frac{31}{32}$ " $\times 10\frac{9}{32}$ " ~ 5 " $\times 7\frac{3}{8}$ " $(177\times261)\sim(127\times187)$ mm	$6\frac{3}{32}$ " $\times 8\frac{1}{2}$ " ~ 5 " $\times 6\frac{1}{6}$ " $(177\times216)\sim(127\times154)$ mm	1.7~2.1
No. 1	$8\frac{1}{32}$ $\sim 7\frac{9}{6}$ $212\sim 192$ mm	0.75~0.88	$3\frac{13}{6}$ \times 5 " \sim 3 $\frac{9}{2}$ " \times 4 $\frac{9}{32}$ " (97 \times 127) \sim (83 \times 109) mm	$\begin{array}{c} 2{}^{15}\!$	$\begin{array}{c} 2{}^{15}\!$	3.1~3.5
No. 1 + No. 2	$6\frac{2}{32}$ $\sim 6\frac{1}{6}$ $172 \sim 163$ mm	1.07~1.20	$\begin{array}{c} 2{}^{1}\!$	$\begin{array}{c} 2\ {}^{3\!\!3{}^{"}}_{32}\times 3\ {}^{''}_{6} - 1\ {}^{27\!\!7{}^{"}}_{32}\times 2\ {}^{23\!\!7{}^{"}}_{32} \\ (53\!\times\!78)\!-\!(47\!\times\!69)\mathrm{mm} \end{array}$	$\begin{array}{c} 2\ {}^{3\!\!/\!2}_{3\!2}\times 2\ {}^{1\!\!/\!2}_{3\!2}\sim 1\ {}^{2\!\!/\!2}_{3\!2}\times 2\ {}^{1\!\!/\!4}_{4}\\ (53\!\times\!64)\!\sim\!(47\!\times\!57)_{\text{mm}} \end{array}$	4.3~4.8

Close-up Photographing Table for 127 mm f/4.7 Lens

Combination	Lens-to-subject	M	Subject coverage			Exposure
	distance	Magnification	3 ½× 4 ½	6 × 9	6 × 7	factor
No. 2	2' ~1' 67/32" 610~463mm	0.25~0.35	$\begin{array}{c} 11\frac{1}{2}"\times1'\ 3"\sim8\ \frac{5}{32}"\times10\frac{21}{32}"\\ (292\times381)\sim(207\times271)\text{mm} \end{array}$	$\begin{array}{c} 8~\%''~\times 1'~1\%''_6 \sim 6~\%''_6 \times 9~\%''_3\\ (225\times 332) \sim (160\times 236)\text{mm} \end{array}$	$\begin{array}{c} 8\ \%"\times 10^{25\%"} - 6\ \%"\times 7\ \%" \\ (225\times 274) - (160\times 194)\mathrm{mm} \end{array}$	1.6~1.8
No. 1	$1' \frac{17}{32}'' \sim 11 \frac{1}{4}''$ $318 \sim 286$ mm	0.59~0.69	$4\frac{2\%''}{32} \times 6\frac{1\%''}{32} \sim 4\frac{1}{8}'' \times 5\frac{137''}{32} \ (123 \times 161) \sim (105 \times 137) \mathrm{mm}$	$3\frac{3}{4}$ " $\times 5\frac{1}{2}$ " $\sim 3\frac{3}{16}$ " $\times 4\frac{23}{32}$ " $(95 \times 140) \sim (81 \times 120)$ mm	$3\ 34'' \times 4\ 26'' - 3\ 36'' \times 3\ 292'' \ (95 \times 116) - (81 \times 99) \mathrm{mm}$	2.5~2.9
No. 1 + No. 2	$10'' \sim 9 \ \frac{3}{8}''$ $254 \sim 238$ mm	0.84~0.94	$3\ \%'' \times 4\ \%'' \sim 3\ \%'' \times 3\ \%'' \times (87 \times 113) \sim (77 \times 101) \mathrm{mm}$	$\begin{array}{c} 2~\%"\times3~\%"-2~\%"\times3~\%"\\ ~~(67\times99)\!\sim\!(60\!\times\!88)\mathrm{mm} \end{array}$	$\begin{array}{c} 2~\% \text{"} \times 3~\% \text{"} \sim 2~\% \text{"} \times 2~\% \text{"} \\ (67 \times 81) \sim (60 \times 73) \text{mm} \end{array}$	3.4~3.8

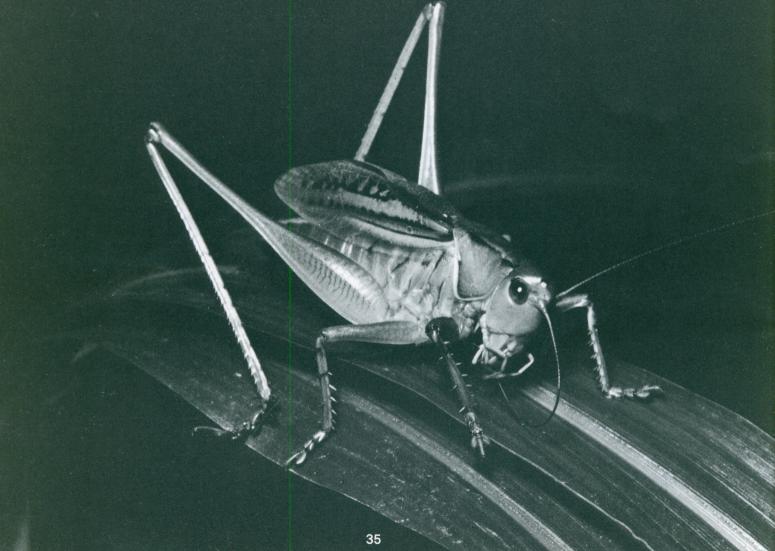

Life-size Photocopying Set

The life-size photocopying set is used for actual size photography by using the 75 mm f/5.6 or 100 mm f/3.5 lens and the spacers.

A sheet for determining the position of subject to be copied and a nonglare glass which prevents reflection are included.

When using the 75 mm f/5.6 lens: When using the 100 mm f/3.5 lens:



Use spacer No.1.

Set lens distance scale to infinity (∞) . Install only the four long legs to the photocopying stand.



Use spacers No. 1 and No. 2.


Retract the lens and set the distance scale to 3m.

Install long legs and extension legs on the photocopying stand.

Tetraphoto Adapter





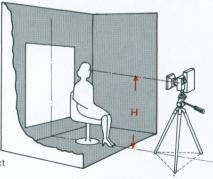

Polaroid Land film pack 100 or 660 series is used for the tetraphoto adapter, whereby quadruple photos can be obtained by a single exposure. Ideal for taking photos for driver's licenses and identification cards.

Lens and Accessories to be used

127mm, f/4.7 lens Polaroid Land pack film holder Tripod adapter (for vertical format)

Photographing

Set the height (optical axis) of the camera on which the tetraphoto adapter is installed to the height of eyes of the subject to be photographed, placing the camera in front of the subject; then adjust the distance.

After confirming whether or not the adapter is inclined, position the center of the subject's face in the center of the adapter finder field of view.

As shown in the sketch, prepare a white background for use only as the photographing range, and use back which reflects negligible light from other portions and on the floor.

H: Height of eyes of the subject

Accessories for the Viewfinder

Sports Finder

For both Mamiya Universal and the Mamiya Press Super 23, this is available in 6×9 and 6×7 formats, both with wire frames for 100 mm and 150 mm lenses.

Really an undispensable accessory for photographing quick-moving subjects.



Eyecup



Maintains the correct eye position and prevents extraneous light from entering the viewfinder from the back when looking into the viewfinder. Attach this to the eyepiece.

Eye-correction Lens

The finder image is adjusted for those people with normal eyesight. Nearsighted or farsighted people without glasses, or those with improper glasses, will have difficulty looking into the image. Use this lens in such cases.

There are eight diopter lenses available (+3, +2, +1, -0.5, -1, -2, -3,and -4).

To attach the lens to the eyepiece, turn the ring on the eyepiece counterclockwise and remove it, insert the lens, and screw the ring back in as it was.

Extension Eyepiece



An Extension Eyepiece (magnification of 0.75X) is available for use with the 70mm Film Holder. Even with the holder attached to the Mamiya Universal camera, the entire field of the viewfinder is clearly visible when the Extension Eyepiece is used.

To attach the Extension Eyepiece to the camera, merely unscrew the Eyepiece Retainer Ring of the camera by turning counterclockwise, and then screw in the Extension Eyepiece in its place.

In addition to being a necessary accessory for the 70mm Film Holder, the Extension Eyepiece will also prove to be a valuable aid when used with other Mamiya Press Film Holders.

Grip and Tripod Adapter

Rotating Grip



Rotating Adapter



This is a unique grip whose angle is freely adjusted according to the photographing posture.

This grip rotates approximately 180°, centering the installation point to the camera; however, when grasping the center belt of the grip, the grip is secured at an optional angle.

This is a convenient universal head which can be freely changed over from a vertical photographing position to a horizontal photographing position (or vice versa) by revolving the camera installed on the tripod, centering the camera optical axis.



Tripod Adapter (For Vertical Format)



For photographing vertical format pictures on a tripod, remove the hand grip from the camera body and attach this tripod adapter to the socket.



Quick-shoe Model 2



A two piece set in which one piece is attached to the camera and the other to the tripod. When this is done, the camera can instantly be mounted to, or removed from, a tripod without the need to fumble with screws.

Case

Mamiya Aluminum Custom Case

The Mamiya Custom Case is a smartly portable, luggage-type aluminum case.

The Custom Case is designed to accommodate and to easily handcarry normally required interchangeable lenses and accessories as well as standard equipment. By changing the inserts, the Custom Case conveniently accommodates the Mamiya Press, Mamiya C, or Mamiya RB and related equipment.

The interchangeable inserts, made of sponge rubber, provide effective shock absorption and sufficient protection of the equipment.

Dimensions (outer): 18% " × 13% " × 6% "

 $(47 \times 35 \times 17 \text{ cm})$

Weight: 8lbs, 2 ½oz., (3.7kg).


Soft Lens Case

A flexible and convenient soft case for lens protection and carrying. Can be used for accommodating one of lenses from 50 mm to 150 mm, or extension rings or accessories, and so on.





Lenses

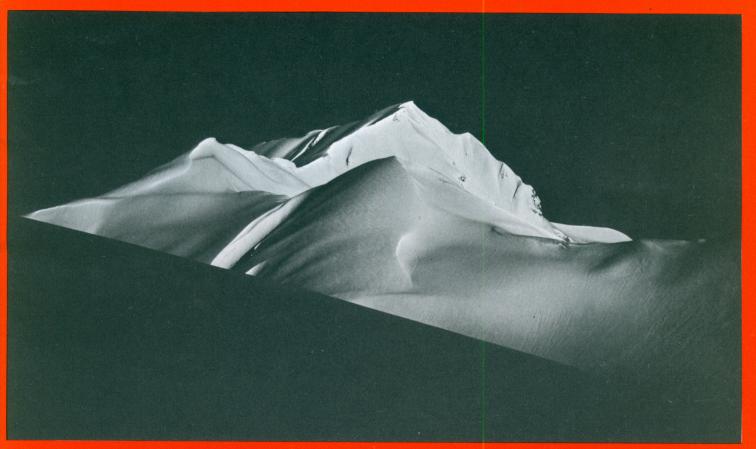

Angle of View Changes by Interchanging Lenses


50F6.3

75^{mm}_{F5.6}

All these pictures were taken from the same position, at an identical distance from the subject.





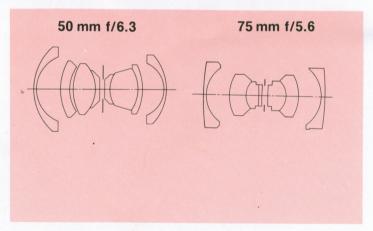

100^{mm}_{F3.5/F2.8} 127^{mm}_{F4.7}

150F5.6


250 F5













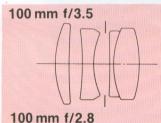

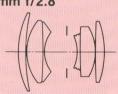

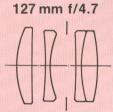

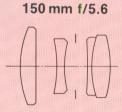

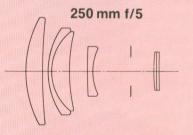

Lens Comparison Chart

50 mm f/6.3



75 mm f/5.6



100 mm f/3.5



100 mm f/2.8



127 mm f/4.7



150 mm f/5.6



250 mm f/5



Lens	Lens con-	Angle	of view	Minimum	Shutter	Filter	Lens hood	Shutter blade
Lens	struction	6×9cm	$6 \times 7 \mathrm{cm}$	aperture	type	size	Lens nood	arresting
50mm f/6.3	5-group 8-element	89° 30′	81° 40′	32	Black	72mm	Clamp-on	Time lock
75mm f/5.6	4-group 7-element	61° *77°	68°	45	Black	72mm	Clamp-on	Press focus
100mm f/3.5	3-group 4-element	53° 30′	47° 30′	32	Black Chrome	55mm 40.5mm	Screw-in Clamp-on	Press focus
100mm f/2.8	4-group 6-element	53° 30′	47° 30′	32	Black Chrome	72mm 72mm	Clamp-on Clamp-on	Press focus Time lever
127mm f/4.7	3-group 4-element	43° 30′ *50° 50′	38° 40′	64	Black	55mm	Screw-in	Press focus
150mm f/5.6	3-group 4-element	37° 10′	32° 40′	45	Black Chrome	55mm 40.5mm	Screw-in Clamp-on	Press focus Time lever
250mm f/5	4-group 6-element	22° 50′	20° 10′	45	Black	105mm	Clamp-on	Time lever

The picture angle marked with an asterisk (*) is that when photographing through the Polaroid film pack format 100 or 660 series.

The black type lens has a black-finished lens barrel scale ring.

The chromium type lens has a chromium-plated shutter speed dial.

The lenses combine Mamiya Sekor lenses, boasting high resolving power and beautiful color balance, incorporating the famed Seiko #0 shutter.

All lenses have an M-X synchro terminal. By selecting this terminal, both M-class flash bulbs and electronic flash can be synchronized at all shutter speeds.

The 250 mm f/5 lens interlocks with the rangefinder from 20ft (7m) to infinity. When photographing at a short distance, focus by directly observing the ground glass focusing screen or by setting the lens distance scale to the actually measured distance (by tape measure) or the distance measured visually.

Regarding the black type and the chromium type lens, the 100 mm f/3.5 and 150 mm f/5.6 lenses have different filter sizes and hood attachment sizes. When purchasing filters, clearly indicate the filter diameter; when purchasing hoods, clearly designate the type of lens and its focal length.

Shutter Operation (For 100 mm f/3.5 and 127 mm f/4.7 lenses, see Page 16.)



Cable Release: Screw the cable release into the cable release socket (1).

Shutter speed: Rotate the shutter speed ring (2), until the desired shutter speed scale is aligned with the index mark.

Cocking: Press the shutter cocking lever (3) in the direction shown in the photo until it stops. When removing the finger, the lever returns to its original position.

Tripping: Press the shutter release trigger of the hand grip or push in the shutter release button (4).

T Setting: To keep the shutter open for focusing on the focusing screen, by setting the shutter speed to "B", cocking the shutter, pushing the shutter release button (4) and rotating it clockwise, the shutter will remain open. To close the shutter, rotate the shutter release button counterclockwise, removing the finger from it.

75^{mm} 100^{mm} 150^{mm} 150^{mm}



Cable Release: Screw the cable release into the cable release socket (1).

Shutter Speed: Rotate the shutter speed ring (2) until the desired shutter speed scale is aligned with the index mark.

Cocking: Press the shutter cocking lever (3) in the direction indicated in the photo until it stops.

Tripping: Press the shutter release trigger or move the shutter release lever (4) in the direction indicated in the photo.

Press Focus: When focusing by the focusing screen, by cocking the shutter (regardless of shutter speed) and pulling out the press focus lever (5), the shutter will remain open. To close the shutter, return the press focus lever (5) to its original position. It is not necessary to recock the shutter.

250^{mm F5}



Cable Release: Screw the cable release into the release socket of the shutter button (1).

Shutter Speed: Rotate the shutter speed ring (2) until the desired shutter speed scale is aligned with the index mark.

Cocking: Press the shutter cocking lever (3) in the direction indicated in the photo until it stops. When removing the finger, the lever returns to its original position.

Tripping: Press the shutter release trigger of the cable release. When the cable release is not attached, press the shutter button (1).

T Setting: When focusing by the focusing screen, by setting the shutter speed to "B", cocking the shutter, and moving the time lever(5) in the direction indicated in the photo until it stops, the shutter will remain open. To close the shutter, return the time lever (5) to its original position. The time lever will not move when the shutter speed is not set on "B".

The shutter speed ring (2) will not turn when the shutter is kept open by using time "T" operation.

Do not move the shutter cocking lever (3) while the shutter is kept open.

Depth of Field Table (Distance in feet)

50mm f/6.3

F ft	000	30	15	. 10	8	7	6	5	4. 5	4	3.5
6. 3	13′ 8″ ∞	9′ 6½″ ∞	7′ 3½″ ∞	5′11″ 34′ 4″	5′ 2½″ 18′ 1″	4′ 9½″ 13′ 6″	4' 3 % 4" 10' 1"	3′ 9½″ 7′ 5½″	3′ 6″ 6′ 4″	3' 2½" 5' 4½"	2' 1034" 4' 5½"
8	10′ 10″ ∞	8′ 1″ ∞	6′ 5½″ ∞	5′ 4 ¼″ 105′	4′ 9¼″ 27′ 8″	4′ 5″ 18′ 1″	4' ½" 12' 5"	3′ 6¾″ 8′ 7½″	3' 3¾" 7' 2"	3' ½" 5' 11"	2' 91/4"
11	7′ 8½″ ∞	6′ 3″ . ∞	5′ 3″ ∞	4′ 6¼″ ∞	4′ 4″ ∞	3′ 10″ 56′ 9″	3′ 6½″ 22′ 11″	3′ 23⁄8″ 12′ 6″	3' 9' 7"	2' 9½" 7' 5"	2' 6½" 5' 9"
16	5′ 6½″ ∞	4′ 9″ ∞	4′ 2″	3′ 8½″ ∞	3′ 5″ ∞	3′ 3″ ∞	3′ ½″ ∞	2′ 95⁄8″ 35′ 9″	2′ 7 ¾″ 18′ 10″	2′ 57/8″ 11′ 10″	2' 35/8" 8'
22	3′11¾″ ∞	3′ 7″ ∞	3′ 3″ ∞	2′11¾″ ∞	2′ 93⁄4″	2′ 8 ½″ ∞	2′ 6³⁄₄″ ∞	2′ 45⁄8″ ∞	2′ 10 ½″ ∞	2′ 2″ ∞	2′ 3⁄8″ 18′ 7″
32	2′10¾″ ∞	2′ 8 ¼″ ∞	2′ 6″ ∞	2′ 4¼″ ∞	2′ 3″ ∞	2′ 2 1 /4″ ∞	2′ 11⁄/8″ ∞	2′ ∞	1′11¼″ ∞	1′10⅓″ ∞	1′ 91⁄8″ ∞

75mm f/5.6

F ft	00	30	15	10	7	5	4	3. 5
5. 6	32′ 7″ ∞	15′ 10″	10' 5" 27' 0"	7' 9½" 14' 1"	5′ 10½″ 8′ 8½″	4' 5" 5' 9"	3' 73/4" 4' 51/2"	3' 23/4 3' 10'
8	23′ 1″	13′ 3″	9′ 3½″ 40′ 8″	7′ 1½″ 16′ 11″	5′ 6″ 9′ 8″	4' 23/4" 6' 2"	3' 6" 4' 8"	3′ 1½ 3′ 11¾
11	16′ 5″ ∞	10′ o 9″	8′ ½″ 144′ 0″	6' 4½" 23' 11"	5' 1" 11' 6"	3′11½″ 6′ 10″	3' 4" 5' ½"	3' 0' 4' 23/4'
16	11′ 8″	8′ 6½″ ∞	6′ 9″ ∞ .	5′ 7″ 58′ 2″	4′ 6¾″ 15′ 11″	3' 8" 8' 1"	3' 1½" 5' 7½"	2' 10' 4' 73/4
22	8′ 4″ ∞	6′ 7 ½″	5′ 6½″ ∞	4′ 8¾″ ∞	4' 0" 34' 9"	3′ 3¾″ 10′ 11″	2' 10½" 6' 10"	2' 7½' 5' 5"
32	5′11½″ ∞	5′ 1″ ∞ 1″	4′ 5″ ∞	3′ 11″ ∞	3′ 5″	2' 11" 22' 6"	2′ 7″ 9′ 10½"	2' 45/8" 7' ½'
45	4' 3½" ∞	3′ 10″	3′ 5½″ ∞	3' 2"	2′ 10″	2′ 6″ ∞	2' 3 ¹ / ₄ " 27' 9"	2' 1½' 12' 8"

100mm f/3.5

ft F	∞	30	15	10	8	7	6	5	4.5	4	3.5
3. 5	93′ 2″ ∞	22' 10" 43' 8"	13' 17' 7"	9′ 1½′	7′ 5½° 8′ 8″	6' 7" 7' 43/4"	5' 8½" 6' 4"	4' 9½" 5' 2½"	4' 4" 4' 8"	3' 10½" 4' 1½"	3′ 5″ 3′ 7″
4	81′ 7″ ∞	22' 1" 46' 9"	12′ 9″ 18′ 1″	9′ ½′ 11′ 3″	7′ 4½* 8′ 9″	6′ 6½° 7′ 6¾°		4' 91/4" 5' 3"	4' 3½" 4' 8½"	3' 101/4" 4' 13/4"	3' 43/4 3' 71/4
5. 6	57′ 9″ ∞	19′ 11″ 60′ 11″	12′ 1″ 19′ 10″	8′ 7½″ 11′ 10″	7′ 1½" 9′ 1½"	6' 4¼" 7' 9¾"	5′ 6½″ 6′ 7″	4′ 8″ 5′ 4½″	4' 3" 4' 91/2"	3' 9½" 4' 2¾"	3' 4½ 3' 7¾
8	40′ 11″ ∞	17′ 6 ″ 107′	11′ 2″ 23′	8′ 2½″ 12′ 10″	6′ 10″ 9′ 8″	6′ 1½″ 8′ 2¾″		4' 63/4" 5' 61/2"	4' 13/4" 4' 11"	3′ 8¾″ 4′ 3¾″	3' 3½ 3' 8¾
11	29′ 1″ ∞	15′ •	10′ 1″ 29′ 7″	7′ 7½″ 14′ 7″	6′ 5½″ 10′ 7″	5′ 9½″ 8′10½″		4' 43/4" 5' 10"	4' 5' 1½"	3' 7½" 4' 5½"	3′ 2¾ 3′ 10″
16	20′ 7″ ∞	12′ 5″ ∞	8′11½″ 50′ 1″	6'11½" 18' 2"	5′11½″ 12′ 3″	5′ 5″ 10′	4' 10" 8'	4' 2½" 6' 3"	3' 10" 5' 5½"	3′ 6″ 4′ 8½″	3' 1½ 4'
22	14′ 8″ ∞	10′ 1″ ∞	7′ 8″ ∞	6′ 2½″ 27′ 10″	5′ 5″ 15′ 11″	4'11 ¾ " 12' 2"	4′ 5¾″ 9′ 3½″	3′.11″ 7′	3' 7½" 6'	3′ 3¾″ 5′ 1″	3' 4' 3"
32	10′ 6″ ∞	7′ 11½″ ∞	6′ 5″ ∞	5′ 4½″ ∞	4′ 9½″ 27′ 9″	4′ 5½″ 17′ 11″	4' 3/4" 12' 2"	3' 7½" 8' 5"	3' 4½" 6' 11¾"	3′ 1¼″ 5′ 9″	2' 10" 4' 81/4

100mm f/2.8

F ft	00	30	15	10	8	7	6	5	4.5	4	3. 5
2.8	116′ ∞	24′ 0″ 40′ 0″	13′ 5″ 17′ 1″	9′ 3½° 10′ 10″	7′ 7″ 8′ 6″	6′ 8″ 7′ 4½″	5′ 9″ 6′ 3½″	4' 10" 5' 2½"	4' 4½". 4' 7¾"	3' 11" 4' 1¼"	3′ 5¼″ 3′ 7″
4	81′ 7″ ∞	22' 2" 46' 8"	12′ 10″ 18′ 1″	9' 0" 11' 3"	7′ 4½″ 8′ 9″	6′ 6½" 7′ 7″	5′ 8″ 6′ 5″	4' 91/4" 5' 31/2"		3' 10½" 4' 1¾"	3' 43 <u>4"</u> 3' 7 <u>1</u> <u>4"</u>
5.6	57′ 8″ ∞	20′ 0″ 60′ 10″	12′ 1″ 19′ 10″	8′ 8″ 11′ 10″	7′ 2″ 9′ 1½″	6′ 4½″ 7′ 10″	5′ 6½″ 6′ 7″	4' 81/4" 5' 41/4"	March Street	3' 93/4" 4' 23/4"	3′ 4¼″ 3′ 8″
8	41′ 0″ ∞	17′ 7 ″ 106′	11' 2" 22' 11"		6′ 10″ 9′ 8″	6′ 1½″ 8′ 2½″	5′ 4½″ 6′ 10″	4' 63/4" 5' 61/2"	4' 2" 4' 11"	3' 83/4" 4' 33/4"	3′ 3¾″ 3′ 8¾″
11	29′ 1″ ∞	15′ 1″ ∞	10' 2" 29' 6"		6′ 5½″ 10′ 7″	5′ 10″ 8′10½″	5′ 1½″ 7′ 3½″	4′ 5″ 5′ 10″	4' 1/4" 5' 11/2"	3' 73/4" 4' 51/2"	3′ 23⁄4″ 3′ 10″
16	20′ 8″	12′ 6″ ∞	9' 0" 49' 9"	7′ 0″ 18′ 1″	6′ 0″ 12′ 3″	5′ 5½″ 9′11½″	4' 10¼" 8' 0"	4' 2½" 6' 3"	3'10½" 5' 5½"	3′ 6″ 4′ 8¼″	3′ 1¾″ 4′ 0″
22	14′ 9″ ∞	10′ 1″ ∞	7′ 9″ ∞	6' 3" 27' 7"	5′ 5½″ 15′ 10″	5′ 0″ 12′ 2″	4' 6" 9' 3½"	3'11½" 6'11½"	3′ 7¾″ 5′11½″	3' 4" 5' 1"	3′ 0″ 4′ 2¾″
32	10′ 6″ ∞	8′ 0″ ∞	6′ 5″ ∞	5′ 5″ ∞	4' 103/4" 27' 4"	4′ 6″ 17′ 9″	4' 1" 12' 1"	3' 73/4" 8' 41/2"	3' 43/4" 6' 11"	3' 1½" 5' 8½"	2'10½" 4' 8"

150mm f/5.6

F ft	00	30	15	10	8	7
5.6	130′ 11½″	24' 7½"	13' 7"	9' 4½"	7' 7½"	6' 8½"
	∞	38' 5½"	16' 9"	10' 8½"	8' 5¼"	7' 3¾"
8	91′ 9½″	22' 10½"	13' 34"	9' 134"	7' 5½"	6' 7¼"
	∞	43' 9¼"	17' 734"	11' ½"	8' 7½"	7' 5½"
11	66′ 10¼″	21'	12' 5½"	8′ 10¼″	7′ 3½″	6' 5½"
	∞	52' 11"	18' 10¾"	11′ 6″	8′ 10¾″	7' 7¾"
16	46′ 1″	18' 6"	11' 7"	8' 5"	7'	6' 3"
	∞	81' 51/4"	21' 51/4"	12' 4¼"	9' 4½"	7' 1134"
22	33′ 7½″	16' 2½"	10′ 8″ ·	7' 11½"	6′ 8¼″	6'
	∞	233' ¾"	25′ 7½″	13' 6½"	10′ ¼″	8' 51/4"
32	23′ 3″ ∞	13′ 5¼″ ∞	9′ 5½″ 38′ 1″	7′ 3½* 16′ 2½*	6' 23/4" 11' 4"	5' 73/4" 9' 4"
45	16′ 7½″	11′ ⅓″	8' 3"	6′ 7″	5' 8 ³ / ₄ "	5' 23/4"
	∞	∞	105' 9¼"	21′ 10¼″	13' 8 ¹ / ₂ "	10' 93/4"

127mm f/4.7

F ft	∞	30	15	10	8	7	6	5
4.7	112′	23′10″	13′ 4″	9′ 3½″	7′ 6½″	6′ 8″	5' 9"	4'10"
	∞	40′ 6″	17′ 2″	10′10″	8′ 6″	7′ 4½″	6' 3"	5' 2"
5. 6	92′9″	22'11"	13′ 1″	9' 1½"	7' 5½"	6' 7"	5′ 8½″	4' 93/4"
	∞	43' 8"	17′ 8″	11' 1"	8' 7½"	7' 5½"	6′ 4″	5' 21/2"
8	65′8″	20'10"	12′ 5″	8′10″	7′ 3″	6′ 5″	5' 7"	4' 834'
	∞	53'11"	19′ 0″	11′ 7″	8′11″	7′ 8″	6' 5½"	5' 3½'
11	46′7″	18′ 7″	11' 7"	8′ 5″	7' 0"	6′ 3″	5′ 5½″	4' 7½"
	∞	80′ 9″	21' 5"	12′ 4″	9' 4½"	8′ 0″	6′ 8½″	5' 5½"
16	33′1″	16′ 0″	10′ 7″	7′11″	6' 7½"	5'11½"	5′ 3″	4′ 6″
	∞	279′ 0″	26′ 2″	13′ 9″	10' 1"	8' 6"	7′½″	5′ 8″
22	23′6″	13′ 6″	9′ 5½″ 38′ 2″	7′ 3½″ 16′ 3″	6' 2½" 11' 5"	5' 7½" 9' 4½"	5′ 0″ 7′ 7″	4' 3¾" 6' 0"
32	16′9″ ∞	11′ 0″	8′ 3″ 111′ 0″	6′ 7″ 22′ 3″	5′ 8½″ 13′11″	5′ 2½″ 10′ 1″	4' 8" 8' 61/2"	4' 1" 6' 6½"
45	11′11″ ∞	8′ 9½″ ∞	6'11 ½ "	5′ 9″ 46′ 8″	5' 1½" 20' 4"	4' 8 ³ / ₄ " 14' 6"	4′ 3½″ 10′ 5″	3′ 9¾″ 7′ 6½″
64	8′7″	6′10½″	5′ 9″	4'1114"	4' 5 3/4"	4' 2 ½ "	3′10½″	3′ 5¾*
	∞	∞	∞	∞	61' 3"	26'11"	15′ 5″	9′ 8*

250mm f/5

F ft	00	200	100	50	-30	20	15	12	10	8
5	407′	134′	80′ 6″	44′ 8″	28' 1"	19' 2"	14′ 6″	11' 8"	9' 9½"	7' 10½"
	∞	390′	132′	56′ 9″	32' 3"	20' 11"	15′ 6″	12' 4"	10' 2"	8' 2½"
5.6	360′	129'	78′ 6″	44' 1"	27′ 10″	19'	14′ 6″	11' 8"	9' 9½"	7' 10½"
	∞	446'	138′	57' 9"	32′ 7″	21' 1"	15′ 7″	12' 4"	10' 3"	8' 1½"
8	255′	112'	72′ 1″	42'	27'	18' 8"	14′ 3″	11' 6"	9' 8½"	7' 10"
	∞	748'	163′	61' 9"	33' 9"	21' 7"	15′ 10″	12' 6"	10' 4"	8' 2½"
11	180′	95′ 2°	64′ 8″	39′ 10″	25' 11"	18' 2"	14'	11' 4"	9' 7"	7′ 9″
	∞	∞	221′	68′ 4″	35' 7"	22' 3"	16' 2"	12' 9"	10' 6"	88′ 4″
16	128′	78′ 2″ ∞	56′ 5″ 442′	36′ 3″ 80′ 8″	24' 7" 38' 7"	17' 6" 23' 4"	13' 7" 16' 9"	11' 1" 13' 1"	9′ 5″ 10′ 8″	7' 7½" 8' 5"
12	90′ 7″	62′ 5″	47′ 9″	32′ 8″	22' 10"	16′ 8″	13' 1"	10′ 9″	9′ 2″	7′ 6″
	∞	∞	∞	108′	43' 9"	25′ 1″	17' 7"	13′ 6″	11′	8′ 7″
32	64′ 3″	48′ 7″	39′ 4″	28′ 5″	20′ 9″	15′ 7″	12′ 5″	10′ 8°	8′ 10½"	7′ 3½″
	∞	∞	∞	209′	54′ 1″	28′ 1″	18′ 11″	14′ 3°	11′ 6"	8′ 10″
45	45′ 8″ ∞	37′ ∞	31′ 5″ ∞	24′ 2″	18′ 5″ 81′ 1″	14′ 3″ 33′ 8″	11' 7" 21' 3"	9' 9½" 15' 6"	8' 5½" 12' 3"	7' ½" 9' 3"

Depth of Field Table (Distance in meter)

50mm f/6.3

m F	00	10	5	3	2.5	2	1.7	1.5	1.3	1.2	1.1	1
	4.17	2.98	2.32	1.79	1.61	1.40	1.25	1.14	1.03	0.97	0.90	0.84
6.3	00	∞	00	9.90	5.85	3.62	2.71	2.22	1.79	1.60	1.42	1.25
	3.30	2.52	2.04	1.62	1.47	1.29	1.17	1.08	0.97	0.92	0.86	0.80
8	00	00	00	27.10	9.27	4.67	3.25	2.55	2.00	1.76	1.54	1.34
	2.35	1.94	1.64	1.37	1.26	1.13	1.04	0.97	0.89	0.84	0.79	0.75
11	00	∞	00	∞	00	10.87	5.31	3.65	2.59	2.20	1.89	1.57
	1.69	1.47	1.30	1.13	1.06	0.97	0.90	0.85	0.79	0.75	0.72	0.68
16	∞	∞	00	00	∞	∞	00	9.66	4.56	3.43	2.65	2.08
	1.21	1.10	1.01	0.91	0.86	0.80	0.76	0.72	0.68	0.66	0.63	0.60
22	00	00	- 00	∞	000	00	000	00	∞	00	6.99	3.98
	0.88	0.82	0.77	0.72	0:69	0.66	0.63	0.60	0.58	0.56	0.54	0.5
32	00	000	.00	00	000	000	00	00	- 00	- 00	∞	- 00

75mm f/5.6

F m	00	10	5	3	2	1.5	1.2	1
	9.92	5.04	3.38	2.34	1.70	1.33	1.09	0.93
5.6	- 00	∞	9.77	4.19 •	2.44	1.72	1.33	1.09
	7.04	4.19	2.98	2.15	1.60	1.27	1.05	0.90
8	∞	- 00	16.28	5.02	2.69	1.84	1.40	1.13
	5.00	3.38	2.56	1.93	1.48	1.20	1.00	0.87
11	00	∞	∞	7.01	3.15	2.03	1.50	1.19
	3.56	2.67	2.13	1.68	1.33	1.10	0.94	0.82
16	∞	. ∞	∞	16.12	4.17	2.39	1.68	1.29
	2.54	2.06	1.73	1.43	1.18	1.00	0.87	0.77
22	00	00	∞	00	7.77	3.21	.2.02	1.48
	1.82	1.57	1.38	1.19	1.01	0.88	0.78	0.70
32	∞ .	00	∞	00	00	6.34	2.88	1.80
	1.31	1.18	1.07	0.96	0.85	0.76	0.69	0.6
45	00	00	00	00	00	∞.	7.47	3.0

100mm f/3.5

F m	∞	10	5	3	2	1.5	1.2	1.0
	28.41	7.46	4.29	2.74	1.89	1.44	1.16	0.98
3.5	∞ .	15.24	6.00	3.32	2.13	1.57	1.24	1.03
	24.87	7.19	4.21	2.71	1.87	1.43	1.16	0.97
4	∞	16.48	6.18	3.37	2. 15	1.58	1.25	1.03
	17.61	6.45	3.95	2.60	1.82	1.40	1.14	0.96
5.6	00	22.57	6.85	3.55	-2.22	1.61	1.26	1.04
	12.49	5.63	3.63	2.47	1.76	1.37	1.12	0.95
8	00	47.48	8.09	3.84	2.32	1.66	1.29	1.06
	8.86,	4.77	3.27	2.30	1.68	1.32	1.09	0.93
11	00	00	10.93	4.36	2.49	1.74	1.34	1.09
	6.29	3.94	2.86	2.10	1.58	1.26	1.05	0.90
16	00	00	21.81	5.38	2.77	1.87	1.41	1.13
	4.48	3.16	2.44	1.87	1.45	1.18	1.00	0.87
22	00	00	00	8.10	3.31	2.08	1.52	1.19
75.5	3.20	2.48	2.03	1.63	1.31	1.09	0.94	0.82
32	00	00	∞	29.76	4.60	2.49	1.71	1.30

100mm f/2.8

F m	00	10	5	3	2.5	2	1.7	1.5	1.3	1.2	1.1	1.0
2.8	35.47	7.86	4.42	2.79	2.36	1.91	1.64	1.45	1.27	1.17	1.08	0.9
2.0	00	13.78	5.76	3.25	2.66	2.10	1.77	1.55	1.34	1.23	1.12	1.0
4	24.87	7.20	4.21	2.71	2.30	1.87	1.61	1.43	1.25	1.16	1.07	0.9
4	000	16.46	6.17	3.37	2.74	2.15	1.80	1.58	1.35	1.24	1.14	1.0
5.6	17.62	6.46	3.95	2.60	2.23	1.83	1.58	1.41	1.23	1.14	1.05	0.9
5.6	~	22.53	6.84	3.54	2.86	2.21	1.85	1.61	1.38	1.26	1.15	1.0
8	12.49	5.64	3.64	2.47	2.13	1.76	1.53	1.37	1.21	1.12	1.04	0.9
0	∞	47.33	8.08	3.84	3.04	2.32	1.91	1.66	1.41	1.29	1.17	1.0
11	8.87	4.78	3.27	2.30	2.01	1.68	1.47	1.32	1.17	1.09	1.01	0.9
11	∞	∞	10.89	4.34	3.34	2.48	2.02	1.74	1.47	1.34	1.21	1.0
16	6.30	3.94	2.87	2.11	1.86	1.58	1.40	1.26	1.13	1.05	0.98	0.9
10	∞	00	21.64	5.35	3.89	2.76	2.20	1.86	1.55	1.40	1.26	1.1
22	4.49	3.17	2.45	1.88	1.68	1.46	1.30	1.19	1.07	1.00	0.94	0.8
22	00	00	∞	8.03	5.10	3.29	2.51	2.07	1.68	1.51	1.34	1.1
20	3.21	2.49	2.03	1.64	1.49	1.31	1.19	1.10	1.00	0.94	0.89	0.8
32	00	00	∞	28.74	9.19	4.55	3.15	2.47	1.93	1.70	1.48	1.2

127mm f/4.7

F m	00	10	5	3	2.5	2	1.7	1.5
4.7	33.99	7.79	4. 40	2.79	2.35	1.91	1.64	1.45
	∞	13.99	5. 79	3.25	2.67	2.10	1.77	1.55
5. 6	28. 26	7.46	4. 30	2.75	2.33	1.89	1.62	1.44
	∞	15.23	5. 99	3.31	2.70	2.12	1.78	1.56
8	20.02	6.75	4. 06	2.65	2.26	1.85	1.59	1.42
	∞	19.48	6. 52	3.46	2.80	2.18	1.82	1.59
11	14.19	5.96	3.77	2.53	2.18	1.80	1.56	1.39
	∞	32.26	7.48	3.69	2.95	2.26	1.88	1.63
16	10.07	5.11	3. 43	2.38	2.07	1.72	1.50	1.35
	∞	∞	9. 44	4.09	3.19	2.39	1.96	1.69
22	7.16	4.27	3. 04	. 2.20	1.93	1.63	1.44	1.30
	∞	∞	15. 09	4.83	3.61	2.61	2.10	1.79
32	5.10	3.46	2.62	1.98	1.77	1.52	1.35	1.23
	∞	∞	∞	6.52	4.44	3.00	2.33	1.95
45	3. 64	2.75	2. 20	1.74	1.58	1.38	1.25	1.15
	∞	∞	∞	13.13	6.65	3.82	2.78	2.23
64	2.61	2.14	1.81	1.50	1.38	1.23	1.13	1.05
	∞	∞	∞	∞	23.94	6.32	3.83	2.84


150mm f/5.6


F m	∞	10	5	3	2.5	2
5.6	39.92	8.06	4.49	2.81	2.38	1.92
5.0	00	13.18	5.65	3.21	2.64	2.08
0	27.98	7.45	4.30	2.75	2.33	1.89
8	∞	15.27	5.99	3.31	2.70	2.12
	20.38	6.80	4.08	2.66	2.27	1.86
11	∞	19.07	6.47	3.44	2.79	2.17
10	14.05	5.95	3.77	2.53	2.18	1.80
16	00	32.64	7.48	3.69	2.94	2.26
00	10.25	5.17	3.46	2.40	2.08	1.73
22	00	231.32	9.21	4.04	3.15	2.37
20	7.08	4.25	3.04	2.20	1.93	1.64
32	. 00	∞	15.09	4.81	3.59	2.60
45	5.07	3.46	2.63	1.99	1.77	1.53
45	00	∞	93.90	6.42	4.38	2.96

250mm f/5

F m	00	50	30	20	15	10	7	5	4	3	2.5
5	124.1	35.7 83.2	24.2 39.4	17.29 23.73	13.43 16.98	9.29	6.65 7.39	4.83 5.19	3.90 4.12	2.94 3.06	2.46 2.54
5.6	109.7 ∞	34.4 91.2	23.6 41.1	16.98 24.32	13.25 17.28	9.21 10.95	6.61 7.44	4.81 5.21	3.88 4.13	2.94 3.07	2.46 2.55
8	77.6 ∞	30.5 138.5	21.7 48.4	15.98 26.72	12.64 18.45	8.91 11.39	6.46 7.64	4.73 5.31	3.83 4.19	2.91 3.10	2.44 2.56
11	55.0 ∞	26.3 ∞	19.5 65.0	14.76 31.04	11.87 20.39	8.53 12.09	6.26 7.94	4.63 5.44	3.77 4.27	2.87 3.14	2.42
16	38.9 ∞	22.0 ∞	17.0 125.8	13.31 40.25	10.92 23.96	8.04 13.24	6.00 8.40	4.49 5.65	3.68 4.40	2.82 3.20	2.38 2.63
22	27.6 ∞	17.8 ∞	14.5 ∞	11.69 69.38	9.82 31.84	7.43 15.22	5.67 9.16	4.30 5.97	3.56 4.58	2.76 3.29	2.34
32	19.6 ∞	14.1 ∞	11.9 ∞	9.98 ∞	8.59 59.58	6.72 19.58	5.25 10.51	4.07 6.50	3.40 4.87	2.67 3.43	2.28
45	13.9 ∞	10.9 ∞	9.5 ∞	8.27 ∞	7.30 ∞	5.92 -32.53	4.76 13.27	3.78 7.42	3.20 5.36	2.55 3.65	2.19 2.91

System Chart for Mamiya Universal

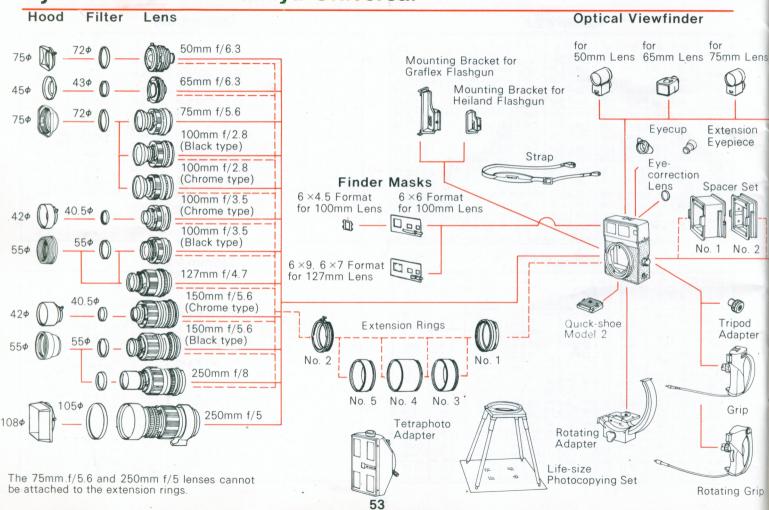

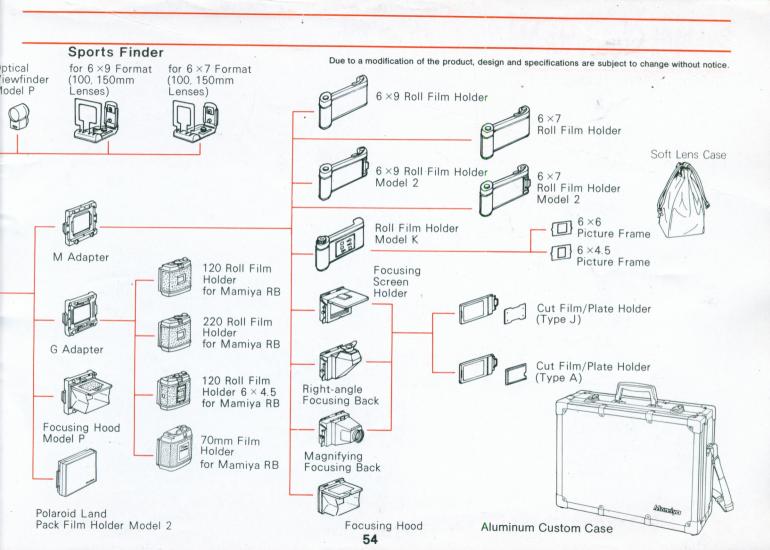



Shin Meikei Bldg. 3-1, Otsuka 3-Chome, Bunkyo-Ku, Tokyo, Japan

"Polaroid" and "Polacolor" are registered trademarks of Polaroid Corporation, Cambridge, Mass., U.S.A.
"Graflex" and "Graflok" are registered trademarks of the Singer Company Graflex Division, Rochester, N.Y., U.S.A.